



# Diamond Textured Nitrile Gloves



PRODUCT INFORMATION	
MATERIAL	Nitrile
COLOR	Green, orange, black
TYPE	Ambidextrous, non-sterile, single-use
INTERIOR	Powder-free
EXTERIOR	Fully diamond textured
SIZES	S - 2XL
COUNTRY OF ORIGIN	Thailand
STORAGE	Store in original packaging in a cool, dry and well ventilated area, away from dust, direct sunlight, moisture, x-ray and excessive heat above 100°F (37°C)



PHYSICAL PROPERTIES		
AQL	1.5	
GLOVE WEIGHT	6.4g (medium)	
GLOVE THICKNESS	6mil, 0.15mm	
GLOVE LENGTH	9.5"	
	BEFORE AGING	AFTER AGING
TENSILE STRENGTH (MPA)	min. 22	min. 22
ULTIMATE ELONGATION	min. 500%	min. 400%

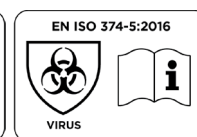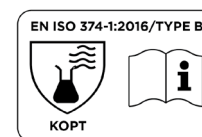

QUALITY STANDARDS	
FDA STATUS	(21 CFR 177) compliant for food handling
AUDIT STANDARDS	Manufactured in an ISO 9001:2015 and an ISO 13485:2016 facility
TEST STANDARDS	EN ISO 374-1:2016/Type B EN ISO 374-5:2016 Resistance to Bacteria, Fungi & Virus

PACKAGING & ORDERING INFORMATION							
GREEN CODE	ORANGE CODE	BLACK CODE	SIZE	PURCHASE UNITS	CASE DIMENSIONS (LxWxH)	CASE WEIGHT	CUBIC FEET
1120202	1220202	1110202	S	1 case of 1,000 Gloves (100/box x 10)	18.1 x 9.9 x 10.7"	16.9lbs	1.1ft <sup>3</sup>
1120302	1220302	1110302	M				
1120402	1220402	1110402	L				
1120502	1220502	1110502	XL				
1120602	1220602	1110602	2XL	1 case of 900 Gloves (90/box x 10)		19.8lbs	

## RESISTANCE OF GLOVES TO PERMEATION BY CHEMICALS

CHEMICAL	EN ISO 374-1:2016 PERFORMANCE LEVEL	EN 374-4:2019 MEAN DEGRADATION / %
Sodium Hydroxide 40% (K)	6	7.3
Sulphuric Acid 96% (L)	1	100.0
Ammonium Hydroxide 25% (O)	2	6.1
Formaldehyde 37% (T)	6	0.9
Hydrogen Peroxide 30% (P)	2	10.5

**EN ISO 374-1:2016** - permeation levels are based on breakthrough times as follows:

Performance Level:	1	2	3	4	5	6
Minimum breakthrough time (Min):	>10	>30	>60	>120	>240	>480

Safety gloves to protect against chemicals are classified according to their permeation time (time taken for the chemical to penetrate the glove) and number of chemicals tested:

- Type A - at least 30min each for at least 6 test chemicals
- Type B - at least 30min each for at least 3 test chemicals
- Type C - at least 10min each for at least 1 test chemicals

**EN 374-4:2019** - Degradation results indicate the change in puncture resistance of the gloves after exposure to the challenge chemical

**EN ISO 374-5:2016** - Resistance to Bacteria and Fungi = Pass, Resistance to Virus = Pass

## MANDATORY STATEMENTS EN ISO 374-1:2016

"This information does not reflect the actual duration of protection in the workplace and the differentiation between mixtures and pure chemicals."  
 "The chemical resistance has been assessed under laboratory conditions from samples taken from the palm only (except in cases where the glove is equal to or over 400mm - where the cuff is tested also) and relates only to the chemical tested. It can be different if the chemical is used in a mixture."  
 "It is recommended to check that the gloves are suitable for the intended use because the conditions at the workplace may differ from the type depending on temperature, abrasion and degradation."  
 "When used, protective gloves may provide less resistance to the dangerous chemical due to changes in physical properties. Movements, snagging, rubbing, degradation caused by the chemical contact etc. may reduce the actual use time significantly. For corrosive chemicals, degradation can be the most important factor to consider in selection of chemical resistant gloves."  
 "*The penetration resistance has been assessed under laboratory conditions and relates to the tested specimen.*"



Contact us today to receive samples or for more information on this product.

**Eagle Protect PBC**  
 sales@eagleprotect.com  
 eagleprotect.com  
 1 800 384 3905

**Head Office**  
 3079 Harrison Avenue #21  
 South Lake Tahoe  
 California 96150



**SAFEGUARD WHAT MATTERS™**